

Compatibility list of the Windows operating systems and SIMATIC optional packages with versions of the STEP 7 basic package

Legend: X = combination permitted
 - = combination not permitted
 (-) = combination not tested

Notes:

This list (possibly a more up to date version) is available on the Internet at: <http://support.automation.siemens.com/WW/view/en/18734363>

- All statements regarding compatibility relate to the installation and combined running of the software on the same PC/programming device
- **Statements regarding compatibility with a STEP 7 version also apply to the service packs for this version unless restrictions are explicitly stated.** (Example: The statements regarding compatibility with STEP 7 V5.3 also apply to STEP 7 V5.3+SP1, ...)
- **Statements regarding compatibility with an S7 optional package also apply to the service packs for this version unless restrictions are explicitly stated.** (Example: The statements regarding compatibility with CFC V6.1 also apply to CFC V6.1+SP1, ...)
- · The Microsoft Windows operating systems are abbreviated in the table below as follows:
 - Win 2000 SP4 Microsoft Windows 2000 Professional Edition + Service Pack 4
 - Win XP SP1 Microsoft Windows XP Professional Edition + Service Pack 1 or Service Pack 1a
 - Win XP SP2 Microsoft Windows XP Professional Edition + Service Pack 2
 - Win 2003 Microsoft Windows Server 2003 standard edition as workstation
 - Win 2003 SP1 Microsoft Windows Server 2003 + Service Pack 1 standard edition with or without R2 as workstation
 - Win 2003 SP2 Microsoft Windows Server 2003 + Service Pack 2 standard edition with or without R2 as workstation
 - Vista Microsoft Windows Vista 32bit Ultimate or Business
 - Vista SP1 Microsoft Windows Vista 32bit + Service Pack 1 Ultimate or Business

STEP 7 Basic Packages			Microsoft Windows Operating Systems							
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2003	Win 2003 SP1	Win 2003 SP2	Vista	Vista SP1
STEP 7	V5.4 SP4	6ES7 810-4CC08-0YA5	-	-	X	-	-	X	X	X
STEP 7	V5.4 SP3.1	6ES7 810-4CC08-0YA5	X	-	X	-	-	X	X	-
STEP 7	V5.4 SP3	6ES7 810-4CC08-0YA5	X	-	X	-	-	X	X	-
STEP 7	V5.4 SP2	6ES7 810-4CC08-0YA5	X	X	X	X	X	X	-	-
STEP 7	V5.4 SP 1	6ES7 810-4CC08-0YA5	X	X	X	X	X	-	-	-
STEP 7	V5.4	6ES7 810-4CC08-0YA5	X	X	X	X	X	-	-	-
STEP 7	V5.3 SP3	6ES7 810-4CC07-0YA5	X	X	X	X	X	-	-	-
STEP 7	V5.3 SP2	6ES7 810-4CC07-0YA5	X	X	X	X	-	-	-	-
STEP 7	V5.3 SP 1	6ES7 810-4CC07-0YA5	X	X	-	-	-	-	-	-
STEP 7	V5.3	6ES7 810-4CC07-0YA5	X	X	-	-	-	-	-	-
STEP 7 Professional	2006 SR5	6ES7 810-5CC10-0YA5	-	-	X	-	-	X	X	X
STEP 7 Professional	2006 SR4	6ES7 810-5CC10-0YA5	X	-	X	-	-	X	X	-
STEP 7 Professional	2006 SR3	6ES7 810-5CC10-0YA5	X	-	X	-	-	X	X	-
STEP 7 Professional	2006 SR2	6ES7 810-5CC10-0YA5	X	X	X	X	X	-	-	-
STEP 7 Professional	2006 SR1	6ES7 810-5CC10-0YA5	X	X	X	X	X	-	-	-
STEP 7 Professional	2006	6ES7 810-5CC10-0YA5	X	X	X	X	X	-	-	-
STEP 7 Professional	2004 SR4	6ES7 810-5CC08-0YA5	X	X	X	X	-	-	-	-
STEP 7 Professional	2004 SR3	6ES7 810-5CC08-0YA5	X	X	X	X	-	-	-	-
STEP 7 Professional	2004 SR2	6ES7 810-5CC08-0YA5	X	X	X	X	-	-	-	-
STEP 7 Professional	2004 SR1	6ES7 810-5CC08-0YA5	X	X	-	-	-	-	-	-
STEP 7 Professional	2004	6ES7 810-5CC08-0YA5	X	X	-	-	-	-	-	-

Note: SIMATIC M7 is released only for operation with Windows 2000 SP4 or Windows XP SP1/2

A&D Data Management (ADDM)			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
A&D Data Management (Client)	V6.1	6BQ3 030-1AA30-3AC0	X	X	X	X	X	X	(-)	-
A&D Data Management (Client)	V5.2	6BQ3 030-1AA30-3AB0	X	X	X	X	X	X	(-)	-
A&D Data Management (Client)	V5.1	6BQ3 030-1AA30-3AB0	X	X	X	(-)	(-)	-	-	-
A&D Data Management (Agent)	V1.2	6BQ3 030-4AA00-0AC0	X	X	X	X	X	-	-	-

Automation License Manager			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
Automation License Manager	V4.0	----	X	X	X	X	X	X	X	X ¹⁾
Automation License Manager	V3.0	----	X	X	X	X	X	X	X	X
Automation License Manager	V2.2	----	X	X	X	X	X	X	(-)	(-)
Automation License Manager	V2.1	----	X	X	X	(-)	(-)	(-)	(-)	(-)
Automation License Manager	V2.0	----	X	X	X	(-)	(-)	(-)	(-)	(-)
Automation License Manager	V1.1	----	X	X	X	(-)	(-)	(-)	(-)	(-)
Automation License Manager	V1.0	----	X	X	X	(-)	(-)	(-)	(-)	(-)

Note: The current Automation License Manager is part of the STEP 7 system setup

¹⁾ also with Windows Vista + SP1

CA 01 – Offline Mall of Automation and Drives			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
Catalog CA 01 10/2007 English	10/2007	E86060-D4001-A100-C6	X	X	X	X	X	–	–	X
Catalog CA 01 10/2006 English	10/2006	E86060-D4001-A100-C5	X	X	X	X	X	–	–	–
Catalog CA 01 10/2005 English	10/2005	E86060-D4001-A100-C4	X	X	X	X	X	–	–	–
Catalog CA 01 10/2004 English	10/2004	E86060-D4001-A100-C3	X	X	X	X	X	–	–	–

CFC			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
CFC	V7.0	6ES7 658-1EX07-2YA5	X	X	X	X	X	X	X ²⁾	–
CFC	V6.1	6ES7 658-1EX16-2YA5	X	X	X ¹⁾	X	X ¹⁾	–	–	–
CFC	V6.0	6ES7 658-1EX06-2YA0	X	X	X	X	X	–	–	–
CFC	V5.2	6ES7 813-0CC05-0YX0	X	–	–	(–)	–	–	–	–

¹⁾ only as of CFC V6.1+SP1 or higher

²⁾ only as of CFC V7.0+SP1 or higher

CM 35			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
CM 35	V5.1	HW: 6AT1 735-0AA01-0AA0	X	X	(–)	(–)	(–)	–	–	–

COM PROFIBUS			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
COM PROFIBUS	V5.1.2.2	6ES5 895-6SE03	X	–	–	X	–	–	–	–

D7-SYS for T400, FM 458, SIMATIC TDC, SIMADYN D			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
D7-SYS	V7.0 ⁶⁾	6ES7 852-0CC01-0YA5	-	-	-	X	X	X	-	-
D7-SYS	V6.2 ⁴⁾	6ES7 852-0CC00-0YA5	X	X	X	X	X ⁵⁾	X ⁵⁾	-	-
D7-SYS-SFC ³⁾	V6.2 ⁴⁾	6ES7 852-1CC00-0YA5	X	X	X	X	X ⁵⁾	X ⁵⁾	-	-
D7-SYS	V6.1 ²⁾	6DD1 801-5DA8 (6DD1801-4DA8) (6DD1807-5DA8)	X	X	(-)	(-)	(-)	-	-	-
D7-SYS-SFC ¹⁾	V6.1 ²⁾	6DD1 801-7DA8 (6DD1801-6DA8)	X	-	-	(-)	-	-	-	-

- 1) contains SFC V6.0
- 2) minimum requirements: CFC V6.0
- 3) contains SFC V6.1
- 4) minimum requirements: STEP 7 V5.3 + SP1 and CFC V6.1
- 5) only as of D7-SYS V6.2+SP1 or higher
- 6) contains CFC V7.0 + SP1, SFC V7.0 + SP1 minimum requirements: STEP 7 V5.4 + SP3 or higher

DOCPRO			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
DOCPRO	V5.4	6ES7 803-0CC03-0YA5	X	(-)	X	X	X	(-)	X	X
DOCPRO	V5.1+SP2	6ES7 803-0CC02-0YE0	X	X	X	X	X	X	-	-
DOCPRO	V5.1+SP1	6ES7 803-0CC02-0YE0	X	X	-	(-)	-	-	-	-

DP/ASi F-Link			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
Object Manager DP/ASi F-Link ¹⁾	V1.1	6RK3 141-*CD10	–	–	–	X	X	X	(–)	–
Object Manager DP/ASi F-Link ¹⁾	V1.0	6RK3 141-*CD10	–	–	–	X	X	X	(–)	–

¹⁾ minimum requirements: STEP 7 V5.4+SP1 or higher and Distributed Safety V5.4+SP1 or higher

Drive ES			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
Drive ES Basic	V5.4	6SW1 700–5JA00–3AA0	X	X	X	X	X	X	(–)	–
Drive ES Basic	V5.3	6SW1 700–5JA00–3AA0	X	X	X ¹⁾	X ³⁾	X ³⁾	–	–	–
Drive ES Graphic	V6.0	6SW1 700–6JB00–0AA0	X	X	X ²⁾	X	X ²⁾	X ²⁾	(–)	–

Note: Drive ES Basic with the component STARTER cannot be installed alongside SIMOTION SCOUT or S7-Technology on one PC/programming device.

Further information on Drive ES compatibility can be found on the Internet at: <http://support.automation.siemens.com/WW/view/en/18495518>

¹⁾ only as of Drive ES Basic V5.3+SP2 or higher

²⁾ only as of Drive ES Graphic V6.0+HF1 or higher

³⁾ only as of Drive ES Basic V5.3+SP3 or higher

M7-PRO C/C++			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
M7-PRO C/C++	V3.1.1 ¹⁾	6ES7 812-0CA01-0YX0	X ²⁾	(-) ²⁾	(-) ²⁾	X ²⁾	(-) ²⁾	-	-	-

The symbol table cannot be called from ProC/C++.

Remedy: Activate the symbol table from the SIMATIC Manager using the "Symbol Table" button.

- 1) At runtime, the M7-SYS RT V4.0 package or later and the C Compiler Borland C++ Version 5.01 are required.
- 2) During setup of M7-Pro C/C++, "-ntall" must be specified as an additional option (running setup from the command line).

M7-SYS RT			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
M7-SYS RT	V5.0	6ES7 802-0FA15-0XX0	X ¹⁾	(-) ¹⁾	(-) ¹⁾	X ¹⁾	(-) ¹⁾	-	-	-
M7-SYS RT	V4.0	6ES7 802-0FA14-0XX0	X ¹⁾	(-) ¹⁾	(-) ¹⁾	X ¹⁾	(-) ¹⁾	-	-	-

- 1) During setup of M7-SYS RT, "-ntall" must be specified as an additional option (running setup from the command line).

Modular PID CONTROL			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
Modular PID Control (Tool)	V5.1	6ES7 830-1AA10-0YX0	X ¹⁾	X ¹⁾	X ¹⁾	X	X	(-)	X	X
Modular PID Control (Tool)	V5.0	6ES7 830-1AA10-0YX0	X	X	X	X	X	-	-	-
Modular PID Control (Tool)	V4.0.1	6ES7 830-1AA10-0YX0	X	X	(-)	(-)	(-)	-	-	-
Modular PID Control (FBs for S7)	V5.1	6ES7 860-1AA10-0YX0	X ¹⁾	X ¹⁾	X ¹⁾	X	X	(-)	X	X
Modular PID Control (FBs for S7)	V5.0	6ES7 860-1AA10-0YX0	X	X	X	X	X	-	-	-
Modular PID Control (FBs for S7)	V4.1.1	6ES7 860-1AA10-0YX0	X	X	(-)	(-)	(-)	-	-	-

- 1) only as of STEP 7 V5.3 + SP2 or higher

PC-Adapter USB			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
PC-Adapter USB	V2.0	6ES7 972-0CB20-0XA0	X	X	X	X	X	X	X	X
PC-Adapter USB	V1.2	6ES7 972-0CB20-0XA0	X	X	X	X	X	X	(-)	-
PC-Adapter USB	V1.1	6ES7 972-0CB20-0XA0	X	X	X	X	X	X	(-)	-
PC-Adapter USB	V1.0	6ES7 972-0CB20-0XA0	X	X	(-)	(-)	(-)	-	-	-

PID Self-Tuner			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
PID Self-Tuner (FBs)	V5.1	6ES7 860-4AA01-0YX0	X ¹⁾	X ¹⁾	X ¹⁾	X	X	(-)	X	X
PID Self-Tuner (FBs)	V5.0.1	6ES7 860-4AA01-0YX0	X	X	X	X	X	-	-	-

¹⁾ only as of STEP 7 V5.3 + SP2 or higher

ProAgent for ProTool			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
ProAgent CS	V6.0+SP3	6AV6 582-2BX06-0DX0	X	X	X	X	X	-	-	-
ProAgent RT/ MP/ OP	V6.0+SP3	6AV6 582-2BX06-0DX0	X	X	X	X	X	-	-	-
ProAgent CS	V6.0+SP2	6AV6 582-2BX06-0CX0	X	X	-	X	-	-	-	-
ProAgent RT/ MP/ OP	V6.0+SP2	6AV6 582-2BX06-0CX0	X	X	-	X	-	-	-	-
ProAgent CS	V5.2+SP3	6AV6 582-2BX05-2CX0	X	-	-	X	-	-	-	-
ProAgent RT/ MP/ OP	V5.2+SP3	6AV6 582-2BX05-2CX0	X	-	-	X	-	-	-	-

ProAgent for WinCC			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
ProAgent for WinCC	V6.0+SP4	6AV6 371-1DG06-0EX0	X ³⁾	-	X ³⁾	X	X	X	-	-
ProAgent for WinCC	V6.0+SP3	6AV6 371-1DG06-0DX0	X ³⁾	-	X ³⁾	X	X	-	-	-
ProAgent for WinCC	V6.0+SP2	6AV6 371-1DG06-0CX0	X ²⁾	X ²⁾	-	-	-	-	-	-
ProAgent for WinCC	V6.0+SP1	6AV6 371-1DG06-0BX0	X ¹⁾	X ¹⁾	-	-	-	-	-	-
ProAgent for WinCC	V5.6	6AV6 371-1DG05-6AX0	X	-	-	X	-	-	-	-

Note: There are close dependencies between STEP 7, WinCC and ProAgent for WinCC and between various service packs. The latest information on released combinations is available on the Internet at: <http://support.automation.siemens.com/WW/view/en/21928032> If there are differences, the information available on the Internet supersedes the information in this document.

- 1) not tested with STEP 7 V5.3+SP3
- 2) only as of STEP 7 V5.3+SP1
- 3) only as of STEP 7 V5.3+SP3

ProAgent for WinCC flexible			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
WinCC flexible / ProAgent	2008	6AV6 618-7DB01-3AB0 6AV6 618-7DD01-3AB0	-	-	-	-	X	-	-	X
WinCC flexible / ProAgent	2007	6AV6 618-7DB01-2AB0 6AV6 618-7DD01-2AB0	-	-	-	X	X	-	-	-
WinCC flexible / ProAgent	2005	6AV6 618-7DB01-1AB0 6AV6 618-7DD01-1AB0	X	X	X	X	X	-	-	-
WinCC flexible / ProAgent	2004	6AV6 618-7DB01-0AB0 6AV6 618-7DD01-0AB0	X	X	X	X	X	-	-	-

ProTool /Pro			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
ProTool /Pro CS	V6.0+SP3	6AV6 582-2BX06-0DX0	X	X	X	X	X	-	-	-
ProTool /Pro RT	V6.0+SP3	6AV6 582-2BX06-0DX0	X	X	X	X	X	-	-	-
ProTool /Pro CS	V6.0+SP2	6AV6 582-2BX06-0CX0	X	X	-	X	-	-	-	-
ProTool /Pro RT	V6.0+SP2	6AV6 582-2BX06-0CX0	X	X	-	X	-	-	-	-
ProTool /Pro CS	V5.2+SP3	6AV6 582-2BX05-2CX0	X	-	-	X	-	-	-	-
ProTool /Pro RT	V5.2+SP3	6AV6 582-2BX05-2CX0	X	-	-	X	-	-	-	-

ProTool /Pro Option SINUMERIK			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
ProTool /Pro CS Option SINUMERIK	V2.2.1.16	6FC5 253-0BX25-0AG0	X	X	(-)	(-)	(-)	-	-	-
ProTool /Pro RT Option SINUMERIK	V2.2.1.16	6FC5 253-0BX25-0AG0	-	X	(-)	-	(-)	-	-	-

Prodave MPI			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
Prodave MPI/IE	V6.0	6ES7 807-4BA01-0YA0	X	X	X	X	X	-	-	-
Prodave MPI	V5.6	6ES7 807-4BA00-0YA0	X	X	(-)	X	(-)	-	-	-
Prodave MPI	V5.5	6ES7 807-4BA00-0YA0	X	-	(-)	(-)	(-)	-	-	-

RF Manager			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
RF Manager	2007 (V1.0)	6GT2 080-3C*00-7AA5	-	-	X	-	X	-	-	-

RFID (MOBY OM)			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
SIMATIC RFID Systems OM ⁵⁾	V1.3.3	6GT2 080-2AA10	X ⁴⁾	X ⁴⁾	X ⁴⁾	X	X	X	(-)	-
SIMATIC RFID Systems OM ³⁾	V1.0	6GT2 080-2AA10	X ⁴⁾	X ⁴⁾	X ⁴⁾	X	X	X	(-)	-
MOBY OM for ASM 473/475 ²⁾	V5.3	6GT2 080-2AA10	X	X	X	X	X	-	-	-
MOBY OM for ASM 470 ¹⁾	V5.1	6GT2 080-2AA10	X	X	X	X	X	-	-	-

- 1) part of the CD Software MOBY V3.5 and higher
- 2) part of the CD Software MOBY V3.6 and higher
- 3) part of the CD "RFID Systems Software & Documentation Edition 03/2006" and higher
- 4) only as of STEP 7 V5.3+SP3 or higher
- 5) part of the CD "RFID Systems Software & Documentation Edition 07/2007"

S7-200 PC Access			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
S7-200 PC Access	V1.0	6ES7 840-2CC01-0YX0	X	X	X ¹⁾	X	X ¹⁾	-	-	X ²⁾

- 1) only as of S7-200 PC Access V1.0 + SP1 or higher
- 2) only as of S7-200 PC Access V1.0 + SP3 or higher

S7 Distributed Safety			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
S7 Distributed Safety	V5.4	6ES7 833-1FC02-0YA5	X ²⁾	X ²⁾	X ²⁾	X	X	X	X ³⁾	X ³⁾
S7 Distributed Safety	V5.3	6ES7 833-1FC01-0YA5	X ¹⁾	X ¹⁾	X ¹⁾	X	X	–	–	–
S7 Distributed Safety	V5.2	6ES7 833-1FC00-0YX0	X	X	(–)	(–)	(–)	–	–	–

¹⁾ only as of STEP 7 V5.3+SP1 or higher

²⁾ only as of STEP 7 V5.3+SP3 or higher

³⁾ only as of S7 Distributed Safety V5.4+SP4 or higher

S7-F Systems			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
S7-F Systems	V6.0	6ES7 833-1CC01-0YA5	X	X	X	X	X	X	X	–
S7-F Systems	V5.2+SP4	6ES7 833-1CC00-0YX0	X	X	X	X	X	X	–	–

Note: S7-F Systems requires CFC

S7-GRAPH			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
S7-GRAPH	V5.3	6ES7 811-0CC06-0YA5	X	X	X	X	X	X ¹⁾	X ²⁾	X ³⁾
S7-GRAPH	V5.2	6ES7 811-0CC05-0YX0	X	X	X	X	X	–	–	–
S7-GRAPH	V5.1	6ES7 811-0CC04-0YX0	X	–	–	(–)	–	–	–	–

¹⁾ only as of S7-GRAPH V5.3+SP1 or higher

²⁾ only as of S7-GRAPH V5.3+SP4 or higher

³⁾ only as of S7-GRAPH V5.3+SP4 or higher; as of S7-GRAPH V5.3+SP6 or higher also with Windows Vista + SP1

S7–HiGraph			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
S7–HiGraph	V5.3	6ES7 811–3CC05–0YA5	X	X	X	X	X	X ²⁾	(–)	–
S7–HiGraph	V5.2	6ES7 811–3CC04–0YE0	X	X	(–)	X	(–)	–	–	–
S7–HiGraph	V5.0	6ES7 811–3CC03–0YE0	X ¹⁾	–	–	(–)	–	–	–	–

¹⁾ only as of S7–HiGraph V5.0+SP1 or higher

²⁾ only as of S7–HiGraph V5.3+SP1 or higher

S7–PDIAG			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
S7–PDIAG	V5.3	6ES7 840–0CC04–0YA5	X ¹⁾	X ¹⁾	X ¹⁾	X	X	X	X ²⁾	X ²⁾
S7–PDIAG	V5.1	6ES7 840–0CC03–0YE0	X	X	X	X	X	–	–	–

¹⁾ only as of STEP 7 V5.3+SP3 or higher

²⁾ only as of S7–PDIAG V5.3+SP2 or higher

S7–PLCSIM			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
S7–PLCSIM	V5.4 ¹⁾	6ES7 841–0CC05–0YA5	–	–	–	X ²⁾	X ²⁾	X ²⁾	X ²⁾	X ⁴⁾
S7–PLCSIM	V5.3	6ES7 841–0CC04–0YA5	X	X	X	X	X	X ³⁾	(–)	–
S7–PLCSIM	V5.2	6ES7 841–0CC03–0YE0	X	X	(–)	X	(–)	–	–	–
S7–PLCSIM	V5.0	6ES7 841–0CA02–0YE0	X	–	–	(–)	–	–	–	–

¹⁾ S7–PLCSIM V5.4 or higher cannot be used with STEP 7 Lite, please use S7–PLCSIM V5.3+SP1

²⁾ only as of STEP 7 V5.4+SP1 or higher

³⁾ only as of S7–PLCSIM V5.3+SP1 or higher

⁴⁾ only as of S7–PLCSIM V5.4+SP2 or higher; as of S7–PLCSIM V5.4+SP2 or higher also with Windows Vista + SP1

S7-SCL			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
S7-SCL	V5.3	6ES7 811-1CC05-0YA5	X	X	X	X	X	X ³⁾	X ⁴⁾	X ⁵⁾
S7-SCL	V5.1	6ES7 811-1CC04-0YX0	X ¹⁾	X ²⁾	X ²⁾	X ¹⁾	X ²⁾	–	–	–

¹⁾ only as of S7-SCL V5.1+SP1 or higher

²⁾ only as of S7-SCL V5.1+SP4 or higher

³⁾ only as of S7-SCL V5.3+SP2 or higher

⁴⁾ only as of S7-SCL V5.3+SP3 or higher

⁵⁾ only as of S7-SCL V5.3+SP3 or higher; as of S7-SCL V5.3+SP5 or higher also with Windows Vista + SP1

S7-Technology			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
S7-Technology	V4.1	6ES7 864-1CC41-0YX0	–	–	–	–	X ³⁾	–	–	–
S7-Technology	V3.0	6ES7 864-1CC30-0YX0	X ²⁾	–	X ²⁾	X	X	–	–	–
S7-Technology	V2.0	6ES7 864-1CC20-0YX0	X ¹⁾	X ¹⁾	X ¹⁾	X	X	–	–	–
S7-Technology	V1.0	6ES7 864-1CC10-0YX0	X	X	(–)	(–)	(–)	–	–	–

Note: S7-Technology cannot be installed alongside SIMOTION SCOUT or Drive ES Basic with the component STARTER on one PC/programming device.

¹⁾ only as of STEP 7 V5.3+SP1 or higher

²⁾ only as of STEP 7 V5.3+SP3 or higher

³⁾ only as of STEP 7 V5.4+SP2 or higher

SIMATIC Computing			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
SIMATIC Computing	V3.1	----	X	X	(-)	X	(-)	-	-	-
SIMATIC Computing	V3.0	6ES7 806-0CC00-0YE0	X ¹⁾	-	-	(-)	-	-	-	-

¹⁾ only as of SIMATIC Computing V3.0+SP1 or higher

SIMATIC iMap			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
SIMATIC iMap	V3.0	6ES7 820-0CC04-0YA5	X ³⁾	X ³⁾	X ³⁾	X	X	X	(-)	-
SIMATIC iMap	V2.0	6ES7 820-0CC03-0YX0	X ¹⁾	X ¹⁾	X ¹⁾	X ²⁾	X ²⁾	X	-	-

¹⁾ to run SIMATIC iMap, the SIMATIC iMap STEP 7-Add-on suitable for the STEP 7 Version must be installed. This ships on the STEP 7 CD or can be obtained from the Internet.

²⁾ to use SIMATIC iMap STEP 7 Add-on V3.0 or higher, at least iMap V2.0+SP2 is required

³⁾ only as of STEP 7 V5.3+SP3 or higher

SIMATIC Logon			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
SIMATIC Logon	V1.4	6ES7 658-7BX41-2YA0	X	-	X	X	X	X	X ²⁾	X ²⁾
SIMATIC Logon	V1.3	6ES7 658-7BX31-2YA0	X	-	X	X ¹⁾	X ¹⁾	X ¹⁾	-	-

Note: Use SIMATIC Logon V1.4+SP1 or higher with STEP 7 as of V5.4+SP3.

¹⁾ only as of SIMATIC Logon V1.3+SP1 or higher

²⁾ only as of SIMATIC Logon V1.4+SP1 or higher, also with Windows Vista + SP1

SIMATIC Maintenance Station			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
SIMATIC Maintenance Station	2007 (V1.0)	6ES7 840-0WD00-0YA0	–	–	–	–	X ¹⁾	X ¹⁾	X ²⁾	–

¹⁾ only as of STEP 7 V5.4+SP2 or higher

²⁾ only as of SIMATIC Maintenance Station 2007+SP2 or higher

SIMATIC NET			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
SIMATIC NET PC Software	2007		–	–	–	–	X	X	X	X
Compising:	(V7.0)									
DP-5613	V7.0	6GK1 713-5DB70-3AA0								
S7-5613	V7.0	6GK1 713-5CB70-3AA0								
FMS-5613	V7.0	6GK1 713-5FB70-3AA0								
SOFTNET-DP	V7.0	6GK1 704-5DW70-3AA0								
SOFTNET-DP Slave	V7.0	6GK1 704-5SW70-3AA0								
SOFTNET-S7	V7.0	6GK1 704-5CW70-3AA0								
CP5613/CP5614 Software DP-Base	V7.0	Ships with CP								
S7-1613	V7.0	6GK1 716-1CB70-3AA0								
SOFTNET-S7	V7.0	6GK1 704-1CW70-3AA0								
SOFTNET-PG	V7.0	6GK1 704-1PW70-3AA0								
SOFTNET-S7 Lean	V7.0	6GK1 704-1LW70-3AA0								
S7-RedConnect Power Pack	V7.0	6GK1 716-0HB70-3AC0								
S7-REDCONNECT	V7.0	6GK1 716-0HB70-3AA0								
SNMP OPC Server Basic	V7.0	6GK1 706-1NW70-3AA0								
SNMP OPC Server Extended	V7.0	6GK1 706-1NX70-3AA0								
SNMP OPC Server Power Pack	V7.0	6GK1 706-1NW70-3AC0								
DX OPC Server	V7.0	6GK1 706-0XW70-3AA0								
PN OPC Server	V7.0	6GK1 706-0HB70-3AA0								
Softnet PROFINET IO	V7.0	6GK1 704-1HW70-3AA0								
TF-1613	V7.0	6GK1 716-1TB70-3AA0								
NCM PC / S7	V5.4.3	----								

SIMATIC NET			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
SIMATIC NET PC Software	2006		–	–	–	X	X	X	–	–
Comprising:	(V6.4)									
DP-5613	V6.4	6GK1 713–5DB64–3AA0								
S7-5613	V6.4	6GK1 713–5CB64–3AA0								
FMS-5613	V6.4	6GK1 713–5FB64–3AA0								
SOFTNET-DP	V6.4	6GK1 704–5DW64–3AA0								
SOFTNET-DP Slave	V6.4	6GK1 704–5SW64–3AA0								
SOFTNET-S7	V6.4	6GK1 704–5CW64–3AA0								
CP5613/CP5614 Software DP-Base	V6.4	Ships with CP								
S7-1613	V6.4	6GK1 716–1CB64–3AA0								
SOFTNET-S7	V6.4	6GK1 704–1CW64–3AA0								
SOFTNET-PG	V6.4	6GK1 704–1PW64–3AA0								
SOFTNET-S7 Lean	V6.4	6GK1 704–1LW64–3AA0								
S7-RedConnect upgrade	V6.4	6GK1 716–0HB64–3AA4								
S7-REDCONNECT	V6.4	6GK1 716–0HB64–3AA0								
SNMP OPC Server Basic	V6.4	6GK1 706–1NW64–3AA0								
SNMP OPC Server Extended	V6.4	6GK1 706–1NX64–3AA0								
SNMP OPC Server Power Pack	V6.4	6GK1 706–1NW64–3AA4								
DX OPC Server	V6.4	6GK1 706–0XW64–3AA0								
PN OPC Server	V6.4	6GK1 706–0HB64–3AA0								
Softnet PROFINET IO	V6.4	6GK1 704–1HW64–3AA0								
TF-1613	V6.4	6GK1 716–1TB64–3AA0								
NCM PC / S7	V5.4.1	----								

SIMATIC NET			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
SIMATIC NET PC Software	2005	6GK1 704-0AA07-3AA0	X	X	X ¹⁾	X	X ¹⁾	X ¹⁾	–	–
Compising:	(V6.3)									
DP-5613	V6.3	6GK1 713-5DB63-3AA0								
S7-5613	V6.3	6GK1 713-5CB63-3AA0								
FMS-5613	V6.3	6GK1 713-5FB63-3AA0								
SOFTNET-DP	V6.3	6GK1 704-5DW63-3AA0								
SOFTNET-DP Slave	V6.3	6GK1 704-5SW63-3AA0								
SOFTNET-S7	V6.3	6GK1 704-5CW63-3AA0								
CP5613/CP5614 Software DP-Base	V6.3	Ships with CP								
S7-1613	V6.3	6GK1 716-1CB63-3AA0								
SOFTNET-S7	V6.3	6GK1 704-1CW63-3AA0								
SOFTNET-PG	V6.3	6GK1 704-1PW63-3AA0								
SOFTNET-S7 Lean	V6.3	6GK1 704-1LW63-3AA0								
S7-RedConnect upgrade	V6.3	6GK1 716-0HB63-3AA4								
S7-REDCONNECT	V6.3	6GK1 716-0HB63-3AA0								
SNMP OPC Server Basic	V6.3	6GK1 706-1NW63-3AA0								
SNMP OPC Server Extended	V6.3	6GK1 706-1NX63-3AA0								
SNMP OPC Server Power Pack	V6.3	6GK1 706-1NW63-3AA4								
DX OPC Server	V6.3	6GK1 706-0XW63-3AA0								
PN OPC Server	V6.3	6GK1 706-0HB63-3AA0								
Softnet PROFINET IO	V6.3	6GK1 704-1HW63-3AA0								
TF-1613 ²⁾	V6.3	6GK1 716-1TB63-3AA0								
NCM PC / S7	V5.3.2	----								

SIMATIC NET			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
SINEMA E Lean / Standard	2006 (V1.0)	6GK1 781-0AA00-6AA0 6GK1 782-0AA00-6AA0	–	–	X	–	X	–	–	X ³⁾
Softnet Security Client	2005 (V1.0)	6GK1 704-1VW01-0AA0	X	X	X	X	X	–	–	–

Note: Further information on compatibility with SIMATIC NET can be found on the Internet at: <http://support.automation.siemens.com/WW/view/en/9859007>

- 1) only as of SIMATIC NET PC Software 2005 +HF1 (V6.3+HF1) or higher
 2) TF-1613 2005 (V6.3) is released only for Win 2000 and Win XP
 3) only as of SINEMA E Lean / Standard 2006+SP2 (V1.0+SP2) or higher

SIMATIC PDM			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
SIMATIC PDM	V6.0	6ES7 658-3AX06-0YA5	X	X	X	X	X	–	–	–
SIMATIC PDM	V5.2	6ES7 658-3AX05-0YC0	X	X ¹⁾	(–)	X	(–)	–	–	–

- 1) only as of SIMATIC PDM V5.2+SP1

SIMATIC Safety Matrix			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
SIMATIC Safety Matrix	V6.1	6ES7 833-1SM*1-0YA5	X	X	X	X	X	X	X	–
SIMATIC Safety Matrix	V5.2	6ES7 833-1SM00-0YA5	X	X	X	X	X	–	–	–

Note: SIMATIC Safety Matrix requires S7–F Systems and CFC

SIMATIC WinBDE			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
SIMATIC WinBDE	V7.2	6AV6 371-1EW06-0*X0	X	X	X	X	X	-	-	-
SIMATIC WinBDE ¹⁾	V7.1	6BQ3 090-2AB20-0CA0	X	-	-	X	-	-	-	-

¹⁾ previously SIMATIC IT WinBDE

SIMOTION SCOUT			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
SIMOTION Scout	V4.1.1	6AU1 810-*BA41-0XA0	-	-	-	-	X ²⁾	-	-	-
SIMOTION Scout	V4.0	6AU1 810-0BA40-0XE0	X ¹⁾	X ¹⁾	X ¹⁾	X	X	-	-	-
SIMOTION Scout	V3.2.1	6AU1 810-0BA32-0XE0	X	X	X	(-)	(-)	-	-	-

Note: SIMOTION SCOUT cannot be installed alongside S7-Technology or Drive ES Basic with the component STARTER on one PC/programming device.

Further information on SIMOTION Scout compatibility can be found on the Internet at: <http://support.automation.siemens.com/WW/view/en/18857317>

¹⁾ only as of STEP 7 V5.3+SP3

²⁾ only as of STEP 7 V5.4+SP1

SINAUT ST7			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
SINAUT ST7	10/2006 (V4.0)	6NH7 997-0CA15-0AA0	X ¹⁾	X ¹⁾	X ¹⁾	X	X	X	-	-
SINAUT ST7	V3.6	6NH7 997-0CA15-0AA0	X	X	X	X	X	X	-	-
SINAUT ST7	V3.5	6NH7 997-0CA15-0AA0	X	X	(-)	(-)	(-)	-	-	-
SINAUT ST7	V3.4	6NH7 997-0CA15-0AA0	X	X	(-)	(-)	(-)	-	-	-

¹⁾ only as of STEP 7 V5.3+SP2

SINUMERIK HMI configuration package WinCC flexible			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
SINUMERIK HMI configuration package WinCC flexible	1.1	6FC5 253-1CX25-1AG0	-	X	X	-	X	-	-	-
SINUMERIK HMI configuration package WinCC flexible	1.0	6FC5 253-1CX25-0AG0	-	X	X	-	X	-	-	-

SIRIUS Engineering			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
Modular Safety System ES	2008 (V1.0)	3ZS1 314-5CC10-0YA5	X	(-)	X	X	X	-	-	X
Motor Starter ES	2007 (V4.0)	3ZS1 310-*CC10-0YA5	X	(-)	X	X	X	-	-	X ¹⁾
Soft Starter ES	2007 (V2.0)	3ZS1 313-*CC10-0YA5	X	(-)	X	X	X	-	-	X ²⁾
Switch ES Motor Starter	2004 SP1	3ZS1 310-0CC20-0YA0	X	X	X	X	X	-	-	-
Switch ES Motor Starter	V2.1	3ZS1 310-0CC20-0YA0	X	X	(-)	(-)	(-)	-	-	-
Switch ES Power	V1.0	3WL6 111-0AS01	X	X	(-)	(-)	(-)	-	-	-
SIMOCODE ES	2007 (V2.0)	3ZS1 312-*CC10-0YA5	X	(-)	X	X	X	-	-	X ³⁾
SIMOCODE-ES Professional	2004 SP1	3ZS1 312-2CC10-0YA0	X	X	X	X	X	-	-	-
WIN-SIMOCODE-DP Professional	V1.3	3UF5 710-0AA00-0	X	X	X	X	X	-	-	X ⁴⁾
OM-SIMOCODE-DPV1	V1.1	3UF5 712-0AA00-0	X	X	X	X	X	-	-	X ⁵⁾

¹⁾ only as of Motor Starter ES 2007+SP1 (V4.0+SP1) but not with STEP 7 V5.4+SP4

²⁾ only as of Soft Starter ES 2007+SP1 (V2.0+SP1) but not with STEP 7 V5.4+SP4

³⁾ only as of SIMOCODE ES 2007+SP1 (V2.0+SP1) but not with STEP 7 V5.4+SP4

⁴⁾ only as of WIN-SIMOCODE-DP Professional V1.3+SP1

⁵⁾ only as of OM-SIMOCODE-DP V1.1+SP1 but not with STEP 7 V5.4+SP4

SIWAREX			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
SIWAREX CS,CF	V5.2	7MH4 910-0AA01	X	X	X	X	X	X	(-)	-
SIWAREX FTA, FTC	V5.2	7MH4 900-2AA01 7MH4 900-3AA01	X	X	X	X	X	X	(-)	-
SIWAREX M	V5.1	7MH4 583-3FA63	X	X	X	X	X	X	(-)	-
SIWAREX U	V5.1	7MH4 683-3AA63	X	X	X	X	X	X	(-)	-
SIWAREX A	V5.1	7MH4 483-3DA63	X	X	(-)	(-)	(-)	(-)	(-)	-

SM 338 - Ultrasonic			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
SM 338 - Ultrasound	V5.1	HW: 6ES7 338-7UH01-0AC0 SW: 6AT1 733-5DA00-2YA0	X	X	X	X	X	X	(-)	-

Standard PID Control			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
Standard PID Control (FBs)	V5.2	6ES7 860-2AA21-0YX0	X ¹⁾	X ¹⁾	X ¹⁾	X	X	(-)	X	X
Standard PID Control (FBs)	V5.1	6ES7 860-2AA21-0YX0	X	X	X	X	X	-	-	-
Standard PID Control (Tool)	V5.2	6ES7 830-2AA21-0YX0	X ¹⁾	X ¹⁾	X ¹⁾	X	X	(-)	X	X
Standard PID Control (Tool)	V5.1	6ES7 830-2AA21-0YX0	X	X	X	X	X	-	-	-

¹⁾ only as of STEP 7 V5.3+SP2

STARTER (drive commissioning tool)			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
STARTER	V4.0	6SL3 072-0AA00-0AG0	(-)	-	(-)	X	X	(-)	(-)	-
STARTER	V3.2	6SL3 072-0AA00-0AG0	X	X	(-)	(-)	(-)	-	-	-
STARTER	V3.1	6SL3 072-0AA00-0AG0	X	X	(-)	(-)	(-)	-	-	-

STEP 7 Lite			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
STEP 7 Lite	V3.0	6ES7 810-3CC07-0YA5	X	X	X	X	X	-	-	-
STEP 7 Lite	V2.0	6ES7 810-3CC06-0YE0	X	X	(-)	X	(-)	-	-	-

STEP 7-Micro/WIN			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
STEP 7-Micro/WIN	V4.0	6ES7 810-2CC03-0YX0	X	X	X	X	X	-	-	X ²⁾
STEP 7-Micro/WIN	V3.2	6ES7 810-2BC02-0YX0	X	X ¹⁾	(-)	X	(-)	-	-	-

¹⁾ only as of STEP 7-Micro/WIN V3.2+SP3 or higher

²⁾ only as of STEP 7-Micro/WIN V4.0+SP6 or higher

Technical Product Data for CAx Applications			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
Technical Product Data for CAx Industrial Automation Systems	2007	6ES7 991-0CD01-0YX0	X	X	X	X	X	-	-	-
Technical Product Data for CAx Industrial Automation Systems	2006	6ES7 991-0CD01-0YX0	X	X	X	X	X	-	-	-
Technical Product Data for CAx Industrial Automation Systems	05/2005	6ES7 991-0CC00-0YX0	X	X	X	X	X	-	-	-
Technical Product Data for CAx Industrial Automation Systems	05/2004	6ES7 991-0CC00-0YX0	X	X	X	X	X	-	-	-
Technical Product Data for CAx Low-Voltage Controls and Distribution	03/2003	E86060-D1000-A207-A4-6300	X	X	X	X	X	-	-	-

Technological Functions			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
Easy Motion Control	V2.1	6ES7 864-0AC01-0YX0	X ²⁾	X ²⁾	X ²⁾	X	X	(-)	X	X
Easy Motion Control	V2.0	6ES7 864-0AC01-0YX0	X	X	X	X	X	-	-	-
FM 350-1, 450-1 IF-CT1 Counter	V6.0	6ES7 350-1AH03-0AE0 6ES7 350-1AH02-0AE0 ¹⁾ 6ES7 350-1AH01-0AE0 ¹⁾ 6ES7 350-1AH00-0AE0 ¹⁾ 6ES7 450-1AP00-0AE0 6ES7 961-3AA00-0AC0	X ²⁾	X ²⁾	X ²⁾	X	X	(-)	X	X
FM 350-1, 450-1 IF-CT1 Counter	V5.1	6ES7 350-1AH03-0AE0 6ES7 350-1AH02-0AE0 ¹⁾ 6ES7 350-1AH01-0AE0 ¹⁾ 6ES7 350-1AH00-0AE0 ¹⁾ 6ES7 450-1AP00-0AE0 6ES7 961-3AA00-0AC0	X	X	X	X	X	-	-	-
FM 350-2 Counter	V6.0	HW: 6ES7 350-2AH00-0AE0	X ²⁾	X ²⁾	X ²⁾	X	X	(-)	X	X
FM 350-2 Counter	V4.0.3	HW: 6ES7 350-2AH00-0AE0	X	X	X	X	X	-	-	-
FM 351, 451 Positioning	V6.0	HW: 6ES7 351-1AH01-0AE0 6ES7 351-1AH00-0AE0 ¹⁾ HW: 6ES7 451-3AL00-0AE0	X ²⁾	X ²⁾	X ²⁾	X	X	(-)	X	X
FM 351, 451 Positioning	V5.0.1	HW: 6ES7 351-1AH01-0AE0 6ES7 351-1AH00-0AE0 ¹⁾ HW: 6ES7 451-1AL00-0AE0	X	X	X	X	X	-	-	-
FM 352, 452 Cam	V6.0	HW: 6ES7 352-1AH02-0AE0 HW: 6ES7 352-1AH01-0AE0 HW: 6ES7 452-1AH00-0AE0	X ²⁾	X ²⁾	X ²⁾	X	X	(-)	X	X

Technological Functions			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
FM 352, 452 Cam	V5.0.1	HW: 6ES7 352-1AH01-0AE0 HW: 6ES7 452-1AH00-0AE0	X	X	X	X	X	-	-	-
FM 352-5 Programming Environment	V1.2	HW: 6ES7 352-5AH00-0AE0	X ²⁾	X ²⁾	X ²⁾	X	X	(-)	X	X
FM 352-5 Programming Environment	V1.1	6ES7 352-5AH00-7XG0 HW: 6ES7 352-5AH00-0AE0	X	X	X	X	X	-	-	-
FM 353 Step	V4.03.05	6ES7 353-1AH01-7AG0 HW: 6ES7 353-1AH01-0AE0	X ²⁾	X ²⁾	X ²⁾	X	X	(-)	X	X
FM 353 Step	V4.03	6ES7 353-1AH01-7AG0 HW: 6ES7 353-1AH01-0AE0	X	X	X	X	X	(-)	(-)	-
FM 354 Servo	V4.03.05	6ES7 354-1AH01-7AG0 HW: 6ES7 354-1AH01-0AE0	X ²⁾	X ²⁾	X ²⁾	X	X	(-)	X	X
FM 354 Servo	V4.03	6ES7 354-1AH01-7AG0 HW: 6ES7 354-1AH01-0AE0	X	X	X	X	X	(-)	(-)	-
FM 453 Step/Servo	V3.03.06	6ES7 453-3AH00-7AG0 HW: 6ES7 453-3AH00-0AE0	X ²⁾	X ²⁾	X ²⁾	X	X	(-)	X	X
FM 453 Step/Servo	V3.03	6ES7 453-3AH00-7AG0 HW: 6ES7 453-3AH00-0AE0	X	X	X	X	X	(-)	(-)	-
FM 355, 455 PID Control	V6.1	HW: 6ES7 355-yVHz0-0AE0 HW: 6ES7 455-yVS00-0AE0 y = 0,1; z = 0,1	X ²⁾	X ²⁾	X ²⁾	X	X	(-)	X	X
FM 355, 455 PID Control	V6.0	HW: 6ES7 355-yVHz0-0AE0 HW: 6ES7 455-yVS00-0AE0 y = 0,1; z = 0,1	X	X	X	X	X	X	(-)	-
FM 355, 455 PID Control	V5.0.1	HW: 6ES7 355-yVHz0-0AE0 HW: 6ES7 455-yVS00-0AE0 y = 0,1; z = 0,1	X	X	X	X	X	-	-	-

Technological Functions			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
FM 355-2	V6.1	HW: 6ES7 355-2CH00-0AE0 HW: 6ES7 355-2SH00-0AE0	X ²⁾	X ²⁾	X ²⁾	X	X	(-)	X	X
FM 355-2	V6.0	HW: 6ES7 355-2CH00-0AE0 HW: 6ES7 355-2SH00-0AE0	X	X	X	X	X	X	(-)	-
FM 355-2	V5.1	HW: 6ES7 355-2CH00-0AE0 HW: 6ES7 355-2SH00-0AE0	X	X	X	X	X	-	-	-
FM 357-2	V5.03	For HW: 6ES7357-4AH03-3AE0 (L) 6ES7357-4BH03-3AE0 (LX) 6ES7357-4CH03-3AE0 (H)	X	X	X	X	X	-	-	-
PtP Param for CP 340, CP 341, CP 440 and CP 441-1/2	V5.1.8	6ES7 340-1xH0y-0AE0; 6ES7 341-1xH0z -0AE0; x=A,B,C; y=0,1,2; z=0,1 6ES7 440-1CS00-0YE0; 6ES7 441-yAA0z-0AE0; y=1,2; z=0,1,2,3,4	X	X	X	X	X	(-)	X	X
PtP Param for CP 340, CP 341, CP 440 and CP 441-1/2	V5.1.7 V5.1.6 V5.1.5	6ES7 340-1xH0y-0AE0; 6ES7 341-1xH0z -0AE0; x=A,B,C; y=0,1,2; z=0,1 6ES7 440-1CS00-0YE0; 6ES7 441-yAA0z-0AE0; y=1,2; z=0,1,2,3,4	X	X	X	X	X	X	(-)	-
Modbus Master	V3.1.4	6ES7 870-1AA00-0YA0 HW: 6ES7 341-1yH00 -0AE0 and 6ES7 341-1yH01 -0AE0; y=A,B,C, with Tool V5.1 HW: 6ES7 441-2AA0x-0AE0 x>1 with Tool V5.1	X	X	X	X	X	(-)	X	X

Copyright © Siemens AG 2008
Subject to change

Siemens Aktiengesellschaft
A5E01103582-03

Technological Functions			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
Modbus Master	V3.1.3 V3.1.2	6ES7 870-1AA00-0YA0 HW: 6ES7 341-1yH00-0AE0 and 6ES7 341-1yH01-0AE0; y=A,B,C, with Tool V5.1 HW: 6ES7 441-2AA0x-0AE0 x>1 with Tool V5.1	X	X	X	X	X	X	(-)	-
Modbus Slave	V3.1.5	6ES7 870-1AB00-0YA0 HW: 6ES7 341-1yH00-0AE0 and 6ES7 341-1yH01-0AE0; y=A,B,C, with Tool V5.1 HW: 6ES7 441-2AA0x-0AE0 x>1 with Tool V5.1	X	X	X	X	X	(-)	X	X
Modbus Slave	V3.1.4 V3.1.3	6ES7 870-1AB00-0YA0 HW: 6ES7 341-1yH00-0AE0 and 6ES7 341-1yH01-0AE0; y=A,B,C, with Tool V5.1 HW: 6ES7 441-2AA0x-0AE0 x>1 with Tool V5.1	X	X	X	X	X	X	(-)	-
Data Highway	V1.0.2	6ES7 870-1AE00-0YA0 HW: 6ES7 341-1yH00-0AE0; and 6ES7 341-1yH01-0AE0; y=A,B,C, with Tool V5.1 HW: 6ES7 441-2AA0x-0AE0; x>1 with Tool V5.1	X	X	X	X	X	(-)	X	X
Data Highway	V1.0.1	6ES7 870-1AE00-0YA0 HW: 6ES7 341-1yH00-0AE0; and 6ES7 341-1yH01-0AE0; y=A,B,C, with Tool V5.1 HW: 6ES7 441-2AA0x-0AE0; x>1 with Tool V5.1	X	X	X	X	X	X	(-)	-

Copyright © Siemens AG 2008
Subject to change

Siemens Aktiengesellschaft
A5E01103582-03

Technological Functions			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
CP 444	V1.2.2	6ES7 444-1MX00-7xG0 HW: 6ES7 444-1MX00-0XE0	X	X	X	X	X	(-)	X	X ³⁾
CP 444	V1.2.1	6ES7 444-1MX00-7xG0 HW: 6ES7 444-1MX00-0XE0	X	X	X	X	X	X	(-)	-

- 1) now only as spare part
 2) only as of STEP 7 V5.3+SP2
 3) but not with STEP 7 V5.4+SP4

TeleService			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
TeleService Edition 11/2007	V6.1.1	6ES7 842-0CE00-0YE0	X	X	X	X	X	X	X	X
TeleService Edition 01/2007	V6.1	6ES7 842-0CE00-0YE0	X	X	X	X	X	X	X	-
TeleService Edition 02/2005	V6.0.1	6ES7 842-0CC10-0YA5	X	X	X	X	X	X	(-)	-
TeleService Edition 07/2004	V6.0	6ES7 842-0CC10-0YA5	X	X	X	X	X	X	(-)	-
TeleService	V5.2	6ES7 842-0CC03-0YE0	X	X	X	X	X	-	-	-
TS Adapter IE	V2.0	6ES7 972-0ED00-0XA0 6ES7 972-0EM00-0XA0	X	X	X	X	X	X	X	X
TS Adapter IE	V1.0	6ES7 972-0ED00-0XA0 6ES7 972-0EM00-0XA0	X	X	X	X	X	X	(-)	-
TS Adapter II	V2.0	6ES7 842-0CB35-0XA0 6ES7 842-0CC35-0XA0	X	X	X	X	X	X	X	X
TS Adapter II	V1.1	6ES7 842-0CB35-0XA0 6ES7 842-0CC35-0XA0	X	X	X	X	X	X	(-)	-
TS Adapter II	V1.0	6ES7 842-0CB35-0XA0 6ES7 842-0CC35-0XA0	X	X	X	X	X	X	(-)	-

Toolbox 810D / 840Di / 840D			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
Toolbox 810D / 840Di / 840D	V7.02.0 1	6FC5 252-7AX21-2AG0	X	X	X	X	X	-	-	-
Toolbox 810D / 840Di / 840D	V6.05.0 2	6FC5 252-6AX21-5AG0	X	X	X	X	X	-	-	-

Toolbox SINUMERIK 840Di sl/840D sl			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
Toolbox SINUMERIK 840Di sl /840D sl	V1.01.0 0.00	6FC5 840-0YC10-1YA8	X	X	X	X	X	-	-	-

USB-Prommer			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
USB-Prommer Edition 10/2007	V2.0	6ES7 792-0AA00-0XA0	X	X	X	X	X	X	X	X
USB-Prommer	V1.1 ¹⁾	6ES7 792-0AA00-0XA0	X	X	X	X	X	X	(-)	-

¹⁾ with USB prommer firmware V1.1 and V1.2

Version Cross Manager / Version Cross Checker			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
Version Cross Manager (VXM)	V7.0	6ES7 658-1CX07-2YA5	X	X	X	X	X	X	X ³⁾	–
Version Cross Checker (VXC) ²⁾	V6.1	6ES7 658-1CX16-2YB5	X	X	X	X	X	–	–	–
Version Cross Checker (VXC) ¹⁾	V6.0	6ES7 658-1CX06-2YA0	X	X	X	X	X	–	–	–

¹⁾ minimum requirements: CFC V5.2+SP1 or higher

²⁾ minimum requirements: CFC V6.1 or higher

³⁾ only as of Version Cross Manager V7.0+SP1 or higher

Version Trail			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
Version Trail ²⁾	V7.0	6ES7 658-1FX07-2YA5	–	–	–	X	X	X	X ³⁾	–
Version Trail ¹⁾	V6.1	6ES7 658-1FX16-2YB5	X	X	X	X	X	–	–	–

¹⁾ minimum requirements: STEP 7 V5.3+SP1 or higher and CFC V6.1 or higher and SIMATIC Logon Service V1.2 SP1 or higher

²⁾ minimum requirements: STEP 7 V5.4+SP1 or higher and SIMATIC Logon Service V1.3 SP1 or higher

³⁾ only as of Version Trail V7.0+SP1 or higher

Vicos RTU			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
Vicos RTU	V1.1.2		X	X	X	X	X	X	(–)	–

WinAC			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
WinAC Basis	V4.1	6ES7 671-0CC03-0YA0	X	X	X	X	X	-	-	-
WinAC Basis	V4.0	6ES7 671-0CC02-0YA0	X	X	-	X	-	-	-	-
WinAC Basis	V3.0	6ES7 671-0CC01-0YX0	X ¹⁾	-	-	(-)	-	-	-	-
WinAC MP ²⁾	V3.1	6ES7 671-0EC02-0YX0	X	X	X	X	X	-	-	-
WinAC MP ²⁾	V3.0	6ES7 671-0EC01-0YX0	X	X	X	X	X	-	-	-
WinAC ODK	V4.1	6ES7 806-1CC02-0BA0	X	X	X	X	X	-	-	-
WinAC ODK	V4.0	6ES7 806-1CC00-0BA0	X	X	X	X	X	-	-	-
WinAC PN Option	V4.1	6ES7 671-0CC03-2YA0	X	X	X	X	X	-	-	-
WinAC PN	V1.1	6ES7 671-0VC02-0YX0	X	-	-	X	-	-	-	-
WinAC RTX	2005	6ES7 671-0RC05-0YA0	X	X	X	X	X	-	-	-
WinAC RTX	V4.1	6ES7 671-0RC04-0YA0	X	X	X	X	X	-	-	-
WinAC RTX	V4.0	6ES7 671-0RC03-0YA0	X	X	(-)	(-)	(-)	-	-	-
WinAC Slot 412 / 416	V4.0	6ES7 673-2CC40-0YA0 6ES7 673-6CC40-0YA0	X	X	X	X	X	-	-	-
WinAC Slot 412 / 416	V3.4	6ES7 673-2CC02-0YA0 6ES7 673-6CC22-0YA0	X	X	X	X	X	-	-	-
WinAC Slot 412 / 416	V3.3	6ES7 673-2CC01-0YA0 6ES7 673-6CC21-0YA0	X	X	-	X	-	-	-	-
WinAC Slot 412 / 416	V3.2	6ES7 673-2CC00-0YX0 6ES7 673-6CC20-0YX0	X	-	-	(-)	-	-	-	-
WinAC Slot T-Kit	V3.3	6ES7 673-0CC00-2YX0	X	X	-	(-)	-	-	-	-
WinAC Slot T-Kit	V3.2	6ES7 673-0CC00-2YX0	X	-	-	(-)	-	-	-	-

¹⁾ only as of WinAC Basis V3.0+SP1 or higher

²⁾ ProTool/Pro V6.0 + SP2 or higher is also required

WinCC			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
WinCC	V7.0	6AV6 381-2B*07-0AX0	–	–	–	–	X ⁸⁾	–	X ⁸⁾	X ⁸⁾
WinCC	V6.2 SP2	6AV6 381-1B*06-2AX0	–	–	–	X ⁷⁾	X ⁷⁾	–	X ⁷⁾	–
WinCC	V6.2	6AV6 381-1B*06-2AX0	–	–	–	X ⁶⁾	X ⁶⁾	X ⁶⁾	–	–
WinCC	V6.0+SP4	6AV6 381-1B*06-0EX0	X ⁴⁾	–	X ⁴⁾	X	X	X	–	–
WinCC	V6.0+SP3	6AV6 381-1B*06-0DX0	X ³⁾	X ³⁾	X ³⁾	–	–	–	–	–
WinCC	V6.0+SP2	6AV6 381-1B*06-0CX0	X ²⁾	X ²⁾	–	–	–	–	–	–
WinCC	V5.1+SP2	6AV6 381-1B*05-1CX0	X ¹⁾	–	–	X ⁵⁾	–	–	–	–

Note: There are close dependencies between STEP 7 and WinCC and between various service packs. The latest information on released combinations is available on the Internet at: <http://support.automation.siemens.com/WW/view/en/21928032>. For joint operation of STEP 7 V5.4 SP4 with WinCC 7.0, you will need to install the SIMATIC NET CD 2007 available on the WinCC data carrier .

- 1) not tested with STEP 7 V5.3+SP1
- 2) not tested with STEP 7 V5.3+SP3
- 3) only as of STEP 7 V5.3+SP1
- 4) only as of STEP 7 V5.3+SP3
- 5) not tested with STEP 7 V5.4+SP2 or higher
- 6) only as of STEP 7 V5.4+SP1, not tested with STEP 7 V5.4+SP4 or higher
- 7) only as of STEP 7 V5.4+SP1
- 8) only as of STEP 7 V5.4+SP3

WinCC flexible			STEP 7 V5.3			STEP 7 V5.4				
Product Name	Version	Order Number	Win 2000 SP4	Win XP SP1	Win XP SP2	Win 2000 SP4	Win XP SP2	Win 2003 SP1	Win 2003 SP2	Vista
WinCC flexible (Micro/Compact/Standard/Advanced)	2008	6AV6 61*-0AA01-3AA5	-	-	-	-	X ²⁾	-	-	X ²⁾
WinCC flexible Runtime	2008	6AV6 613-1*A01-3AA0	-	-	-	-	X ²⁾	-	-	X ²⁾
WinCC flexible (Micro/Compact/Standard/Advanced)	2007	6AV6 61*-0AA01-2AA5	-	-	-	X	X	-	-	-
WinCC flexible Runtime	2007	6AV6 613-1*A01-2AA0	-	-	-	X	X	-	-	-
WinCC flexible (Micro/Compact/Standard/Advanced)	2005	6AV6 61*-0AA01-1CA5	X	X	X	X	X	-	-	-
WinCC flexible Runtime	2005	6AV6 613-1*A01-1CA0	X	X	X	X	X	-	-	-
WinCC flexible (Micro/Compact/Standard/Advanced)	2004	6AV6 61*-0AA01-0AA0	X	X	X ¹⁾	X	X ¹⁾	-	-	-
WinCC flexible Runtime	2004	6AV6 613-1*A01-0AA0	X	X	X ¹⁾	X	X ¹⁾	-	-	-

Note: Further information on compatibility with WinCC flexible can be found on the Internet at: <http://support.automation.siemens.com/WW/view/en/22054701>

- 1) only as of WinCC flexible 2004+SP1
2) only as of STEP 7 V5.4 SP3 or higher